



NOTE: ALWAYS INSTALL PANELS FROM RIGHT TO LEFT (Looking up at ridge from eave)

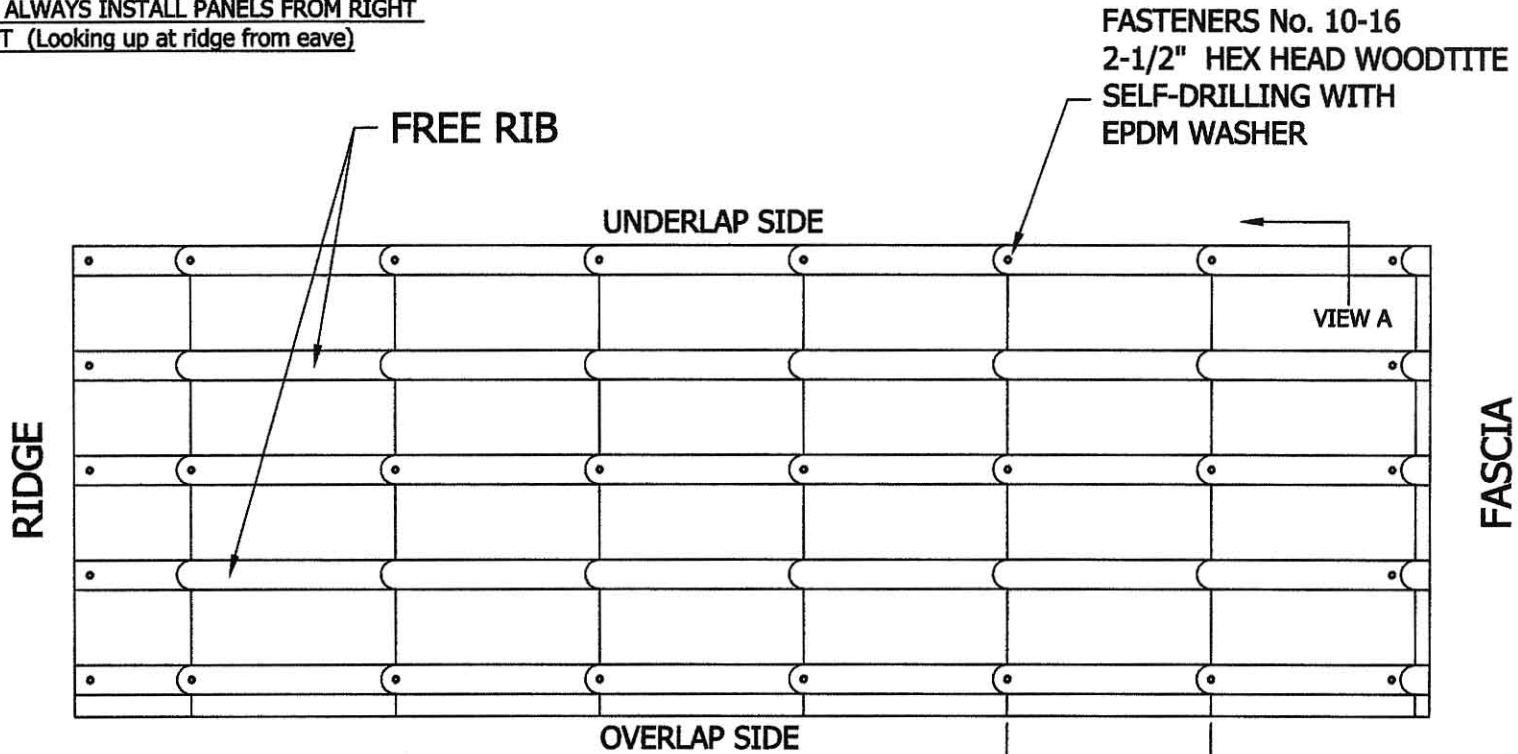

FASTENERS No. 10-16
2-1/2" HEX HEAD WOODTITE
SELF-DRILLING WITH
EPDM WASHER

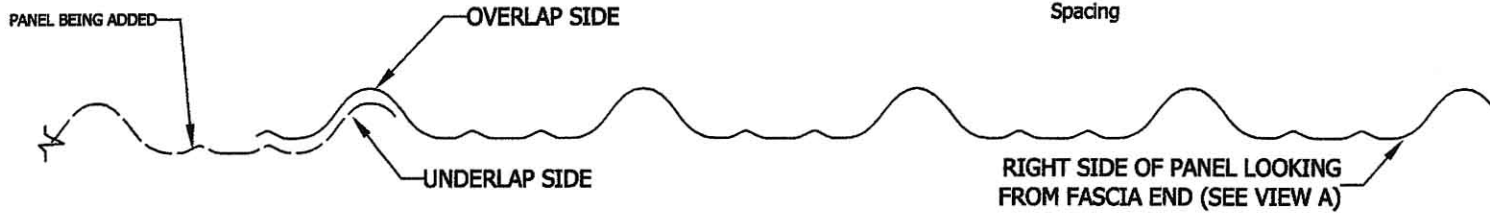

Note: Above is the general screw pattern for Permatile. For HVHZ zones or wind speed restricted areas, please see the **Permatile Load Table Over Plywood** testing paper for proper fastening in your area.

| |
|---|
| PERMATILE ROOFING A Division of Advanced Aluminum |
| DESCRIPTION: PERMATILE SCREW FASTENING DETAIL |
| STYLE: STANDARD PERMATILE PANEL |
| FILE: SCREWPATTERN-01 |