

UNIVERSAL CLOSURES RECOMMENDED ON  
ROOF SLOPES LESS THAN 4:12

2-1/2" #10 WOODGRIP SCREW  
(ATTACH EVERY OTHER HIGH SIDE ROLL)

-NOTE: CUT PANELS TO LEAVE APPROX.  
2" GAP FROM SPLASH STOP FOR RAIN  
WATER TRAVEL.

PERMATILE 26g METAL PANEL

1" #10 WOODGRIP SCREW  
(ATTACH EVERY 2' TO 3' O.C.)

UNDERLAYMENT MINIMUM 30# OVER ENTIRE ROOF  
\*36" WIDE SHEET OF POLYSTICK TU PLUS OR SIMILAR  
RECOMMENDED BENEATH CENTER OF VALLEY


PLYWOOD(TYP.)

VALLEY PAN-

\*CAULK BETWEEN VALLEY PANS AT OVERLAP

**THIS PAGE CONTAINS GENERAL APPLICATION DETAILS-**

ACTUAL INSTALLATION MAY REQUIRE ADDITIONAL ITEMS BASED ON GOOD ROOFING PRACTICES.  
FOR FLORIDA BUILDING CODE & HVHZ INSTALLATION REQUIREMENTS SEE ENGINEER SEALED DETAIL PAGES.

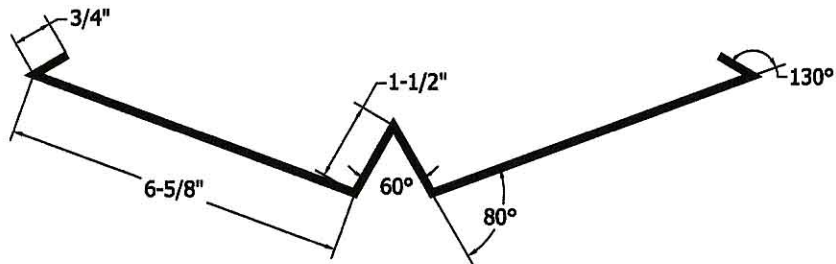

**PERMATILE ROOFING**  
A Division of Advanced Aluminum

DESCRIPTION: W-VALLEY DETAIL

STYLE: FOR USE ON PLYWOOD DECKING

FILE: PTVALLEY-01